



Lewis K710 LOCKING SAFETY KNIFE

with AUTOMATIC LOCKING SAFETY HOOD

Safety Hood Snaps Shut After Cut!



FEATURES:

- Safety hood snaps shut and locks once contact with the cutting surface is lost
- Easy-tool-free blade change
- Ergonomically designed for use with either right or left hand
- Safety hood is clear for easy viewing of the cutting edge

Use Lewis Utility Knife Replacement Blades (#B10CHD)



OPERATING INSTRUCTIONS:

1. Press yellow slide and push forward (1/4" blade exposure) or back (3/4" blade exposure) to set depth of cut.
2. Press and hold front of yellow slide to release safety hood lock.
3. Press tip of safety hood on cutting surface and start cutting (once pressure is on safety hood, yellow slide can be released).



1/4" Depth Setting (6.35 mm)



3/4" Depth Setting (19.05 mm)

BLADE REPLACEMENT

1. Pull down latch on right side of knife and pull backbone down to expose blades.
2. Move latch forward so that blade lock slides away from blade.
3. Replace blade with spare blade provided.
4. **IMPORTANT:** TO CLOSE KNIFE MAKE SURE ARROWS ON BACKBONE ARE LINED UP BY THE WORD "CLOSE", OTHERWISE THE LATCH WILL BE DAMAGED (SEE INSET).
5. Slide backbone back into the body of the knife and swing latch up into body to lock.

